

SB-3K 、SB-5K 螺旋式彈簧吊車使用說明書

SB-7K(S)、SB-9K(S) INSTRUCTION MANUAL

一、安裝步驟 Installation :

1. 將掛吊安裝於穩固之位置。
 2. 請加裝安全鋼索，安裝於穩固之位置。
 3. 將荷重範圍內之工具安裝於吊勾內。
1. Install the hanger at stable fixture.
 2. Install an auxiliary wire at stable fixture.
 3. Install the tool under max capacity at the hook.

二、荷重調整 How to Adjust :


1. 調整前，先卸下工具。
 2. 使用六角板手，依「順時鐘增強、逆時鐘減弱」之方式調整至適當荷重。
 3. 調整後，重新安裝工具。
1. Unload the tool, first.
 2. Adjust the Capacity by Hex spanner.
↑ Increase Capacity: Clock-Wise
↓ Decrease Capacity: Counter Clock-Wise
 3. Reload the tool after adjusting.




三、注意事項 Cautions :

1. 工具不可超過荷重。
 2. 固定擋片螺絲不可旋開鬆脫。
 3. 保持吊勾靈活及活動，勿固定鎖死。
 4. 若需維修，請洽當地經銷商，不宜自行拆解。
1. The tools should be in the capacity range.
 2. The ratchet screw should not be loosen.
 3. Please keep the hanger be able to turn and swing.
 4. Please contact the dealer for repair.

四、使用前檢查 Checks before Using :

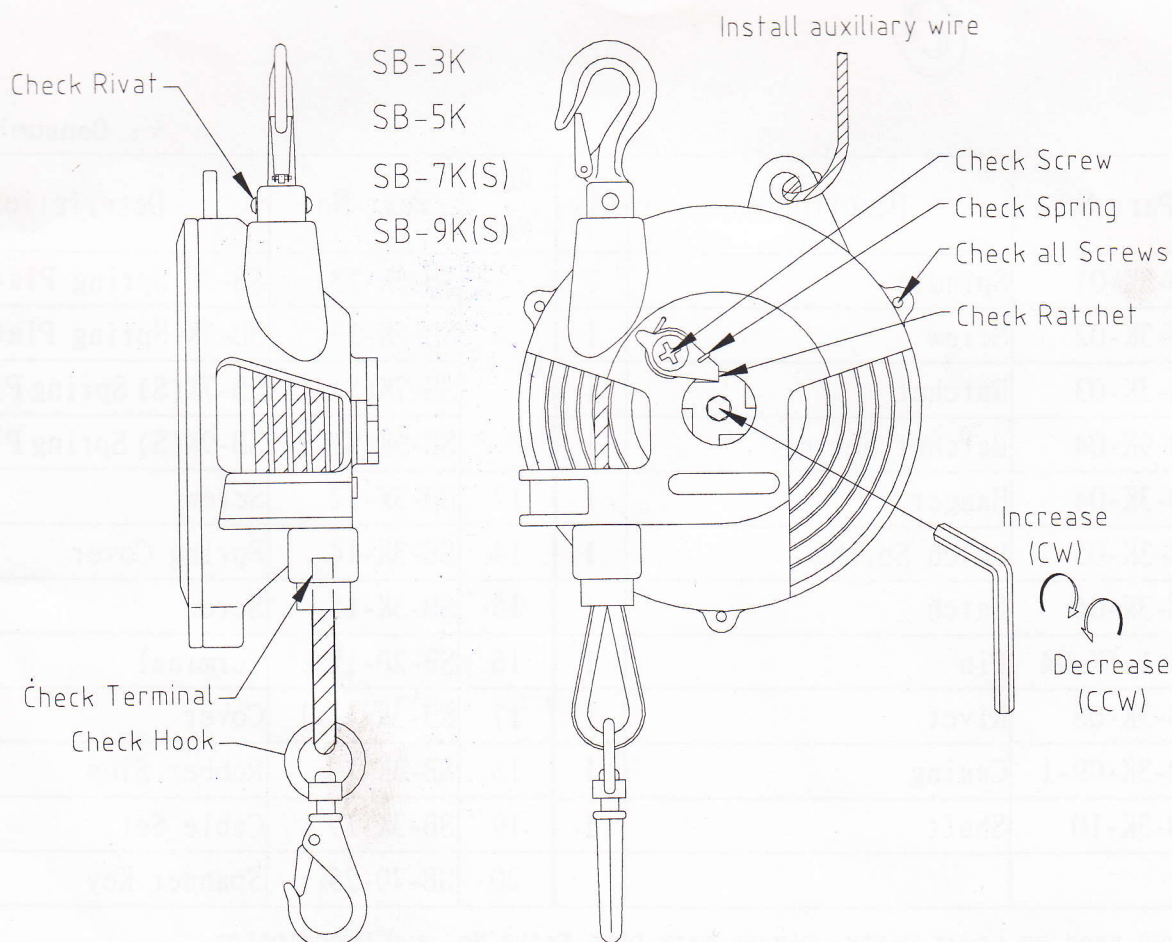

SB-3K
SB-5K
SB-7K (S)
SB-9K (S)

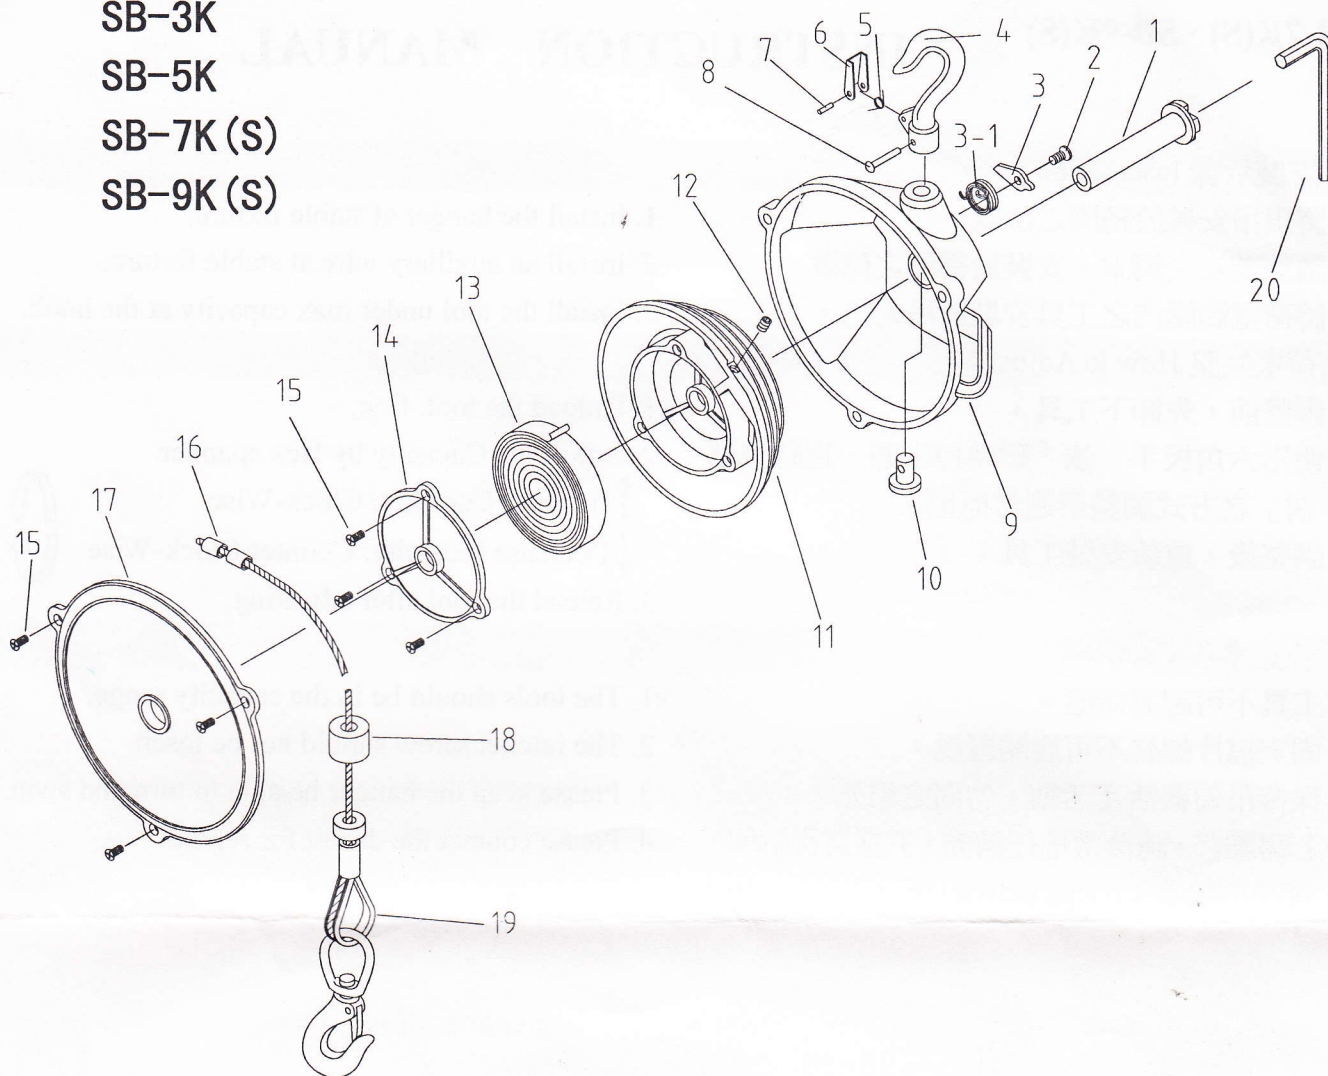

*: Consuming Part

Ref No.	Part No.	Description	Qty	Ref No.	Part No.	Description	Qty
1	SB-3K-01	Spindle	1	11.13	SB-3K-13	SB-3K Spring Plate Set	1
2	SB-3K-02	Screw	1		SB-5K-13	SB-5K Spring Plate Set	1
3	SB-3K-03	Ratchet	1		SB-7K(S)-13	SB-7K(S) Spring Plate Set	1
3-1	SB-9K-04	Ratchet Spring	1		SB-9K(S)-13	SB-9K(S) Spring Plate Set	1
4	SB-3K-04	Hanger	1	12	SB-3K-12	Screw	1
5	SB-3K-05	Latch Spring	1	14	SB-3K-14	Spring Cover	1
6	SB-3K-06	Latch	1	15	SB-3K-15	Screw	6
7	SB-1.5K-04	Pin	1	16	SB-20-15	Terminal	2
8	SB-3K-08	Rivet	1	17	SB-3K-17-1	Cover	1
9	SB-3K-09-1	Casing	1	18	SB-3K-18	Rubber Stop	1
10	SB-3K-10	Shaft	1	19	SB-3K-19	Cable Set	1
				20	SB-70-25	Spanner Key	1

※If you need to order parts, please mark both **Parts No.** and **Description.**